

GEN 2.4 Location indicators

Location indicator used are in accordance with the indicators published in *ICAO Doc 7910*.

The location indicators marked with an asterisk (*) cannot be used in the address component of AFS messages.

1. ENCODE		2. DECODE	
Location	Indicator	Indicator	Location
AMBROLAURI	UGAM*	UGAM*	AMBROLAURI
BATUMI	UGSB	UGGG	TBILISI FIR
KUTAISI/KOPITNARI	UGKO	UGGT*	TELAVI
MESTIA	UGMS*	UGGU	TBILISI CAA
NATAKHTARI	UGSA*	UGKO	KUTAISI/KOPITNARI
TBILISI FIR	UGGG	UGMS*	MESTIA
TBILISI CAA	UGGU	UGSA*	NATAKHTARI
TBILISI/TBILISI	UGTB	UGSB	BATUMI
TELAVI	UGGT*	UGTB	TBILISI/TBILISI

PAGE INTENTIONALLY LEFT BLANK